



IMPORTANT SAFETY WARNING



BEKO, LEISURE & FLAVEL GAS COOKERS

It has recently come to our attention that particular Beko, Leisure and Flavel cookers with a separate oven and grill can, if they are not operated in accordance with the user instructions, pose **a serious risk to your health**.

These appliances are designed for cooking purposes only and must NOT be used as a space heater, or for any other purpose.

CHECK THE LIST BELOW TO SEE IF YOU OWN ONE OF THE AFFECTED COOKERS.

Click on the model number to download an instruction booklet if required.

Brand	Product Model Number	Brand	Product Model Number
Beko	DCG8511WLPG	Beko	DCG8511PLW
Beko	DG581LWP	Leisure	CM10NRK
Leisure	CM10NRC	Leisure	AL6NDW
Leisure	CM101NRCP	Leisure	CM101NRKP
Flavel	DCGAP5LS	Flavel	AP5LDWP
Flavel	AP5LDW	Flavel	AP5LDSP
Flavel Milano	ML5NDS		

WHAT YOU NEED TO DO IF YOU OWN ONE OF THESE COOKERS

1. FOLLOW THE PRODUCT INSTRUCTION MANUAL AND DO NOT OPERATE THE GRILL WITH THE GRILL DOOR CLOSED

When the grill burner is on, the grill door must **always** be in the open position. If the grill is operated with the grill door closed, the air supply to the grill burner is restricted which can cause extremely dangerous levels of carbon monoxide to be produced which can pose a very serious risk to health.

2. ARRANGE FOR A FREE SAFETY INSPECTION AND MODIFICATION


If you own or use any of the models shown above, please call the manufacturer on:

UK Free phone 0800 294 3129

Ireland Free phone 1800 25 29 25

They will then arrange to carry out a **free modification** to your product to remove any risk

When calling please have your full model number and serial number to hand - these can be found on the rating plate at the bottom front edge of the appliance (see details below).

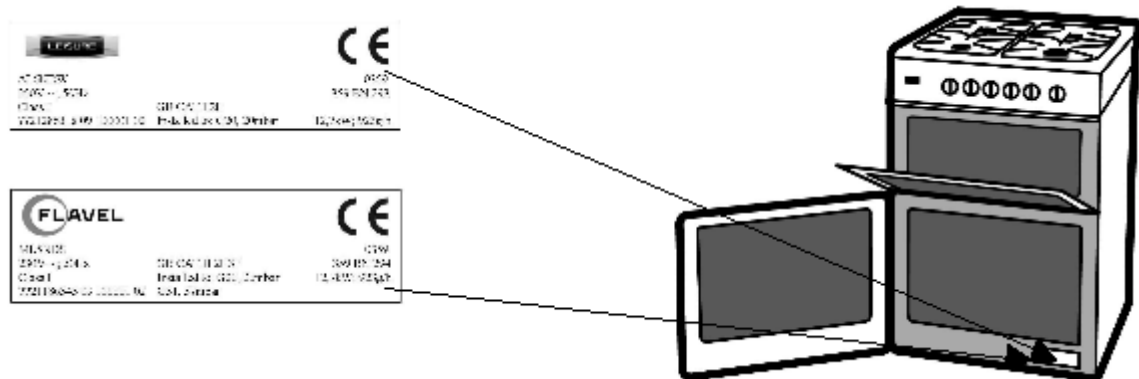

Beko plc, Beko House, Caxton Way, Watford WD18 8UF

www.beko.co.uk www.leisurecp.co.uk